

Bug Pod Silicone Adhesive Kit

IMPORTANT

This kit will allow you to mount the Boon Bug Pod using silicone adhesive. The enclosed wall bracket includes four double-sided tape pieces. You **MUST** use **BOTH** the double-sided tape **AND** the silicone adhesive to install the bracket. The wall bracket will **NOT** remain on the wall with the tape alone. **DO NOT** INSTALL THE BRACKET WITHOUT THE SILICONE ADHESIVE.

⚠ WARNING

- Adult assembly required.
- Prior to installation, remove all packaging materials and discard properly.
- The Bug Pod is not a toy!
- NEVER leave child unattended when bathing.
- This product should **ALWAYS** be used **ONLY** under adult supervision.
- Never apply excessive force to or allow children to hang from the Bug Pod.
- **ALWAYS** position the product on the lower portion of the bath wall.
- When using the silicone adhesive mounting option, **DO NOT** load the Bug Pod with more than 10 lbs. of toys and accessories.

Important Notes for Using the Silicone Adhesive Kit

- **DO NOT** hang the Bug Pod body and scoop on the bracket prior to this 48 hour time period.
- The wall bracket **WILL NOT** remain on the wall with tape alone. **DO NOT** INSTALL THE BRACKET WITHOUT THE SILICONE ADHESIVE.
- Place wall bracket onto the wall only once. **DO NOT** try to remove and reposition the wall bracket after mounting the first time.

⚠ CAUTION

Contact with uncured adhesive may cause eye or skin irritation. Avoid contact with eyes and skin. Do not handle contact lenses with product on hands. Wash hands thoroughly after handling. In case of eye contact, immediately flush eyes with water for 15 minutes. If irritation develops and persists, seek medical attention. **KEEP THIS ADHESIVE OUT OF REACH OF CHILDREN AT ALL TIMES.** While curing, silicone releases acetic acid. Avoid prolonged exposure and keep area well ventilated.


Mounting Instructions

1. Select a mounting location on the lower portion of the wall. Leave a minimum of 7 inches between the bottom of the bracket and any edge or raised surface of a bathtub below it.



2. **THOROUGHLY** clean wall surface with a household cleaner to remove any soap film or residue. Rinse **THOROUGHLY** and allow to dry completely. Be certain that you clean the entire area where the adhesive strips will be attached.
3. Next, **VIGOROUSLY** wipe area with rubbing alcohol. Let dry fully for **AT LEAST 10** minutes.
4. Remove backing from double-sided tape.

5. Apply entire contents of silicone adhesive tube to back of the wall bracket in areas shown in diagram. Avoid getting silicone on double-sided tape.

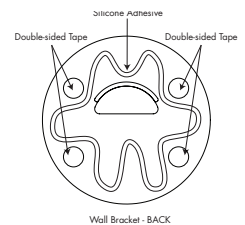

6. Make sure hook on wall bracket is in the upward position and level.
7. Place bracket into position on wall. Avoid placing tape on grout lines. Press firmly over double-sided tape to ensure adhesion.
8. Press wall bracket firmly against surface.



Allow **48 hours** for the silicone to cure before hanging the Bug Pod body and scoop on the wall bracket.

Removal Instructions

To remove the wall bracket, use a household solvent (like De-Solv-it® or Goo Gone®) to saturate surface behind wall plate. Spray or pour solvent directly on silicone. Allow solvent to sit for at least 5 minutes. Use a razor blade to cut the top of the silicone adhesive away from wall at top of bracket. Pull bracket from wall while continuing to cut adhesive.

Remove any remaining adhesive from wall with additional solvent and a razor blade.

If you have any questions or need further assistance, please do not hesitate to contact the Boon Customer Service Department at 888.376.4763 or info@booninc.com.

www.booninc.com

