

# Frog Pod<sup>®</sup> Silicone Adhesive Kit

## IMPORTANT

This kit will allow you to mount the Boon Frog Pod using silicone adhesive. The enclosed wall bracket includes four double-sided tape pieces. You **MUST** use **BOTH** the double-sided tape **AND** the silicone adhesive to install the bracket. The wall bracket will **NOT** remain on the wall with the tape alone. **DO NOT** INSTALL THE BRACKET WITHOUT THE SILICONE ADHESIVE.

## ⚠️ WARNING

- Adult assembly required.
- Prior to installation, remove all packaging materials and discard properly.
- The Frog Pod is not a toy!
- NEVER leave child unattended when bathing.
- This product should ALWAYS be used ONLY under adult supervision.
- Never apply excessive force to or allow children to hang from the Frog Pod.
- ALWAYS position the product on the lower portion of the bath wall.
- When using the silicone adhesive mounting option, DO NOT load the Frog Pod with more than 10 lbs. of toys and accessories.


## Mounting Instructions

1. Select a mounting location on the lower portion of the wall. Leave a minimum of 10 inches between the bottom of the bracket and any edge or raised surface of a bathtub below it.



2. THOROUGHLY clean wall surface with a household cleaner to remove any soap film or residue. Rinse THOROUGHLY and allow to dry completely. Be certain that you clean the entire area where the adhesive strips will be attached.
3. Next, VIGOROUSLY wipe area with rubbing alcohol. Let dry fully for AT LEAST 10 minutes.
4. Remove backing from double-sided tape.

5. Apply entire contents of silicone adhesive tube to back of the wall bracket in areas shown in diagram below. Avoid getting silicone on double-sided tape.

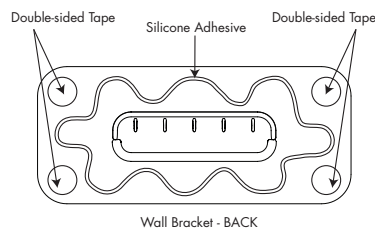

6. Make sure hook on wall bracket is in the upward position and level.



7. Place bracket into position on wall. Avoid placing tape on grout lines. Press firmly over double-sided tape to ensure adhesion.
8. Press wall bracket firmly against surface.

Allow **48 hours** for the silicone to cure before hanging the Frog Pod body and scoop on the wall bracket.

## Important Notes for Using the Silicone Adhesive Kit

- DO NOT hang the Frog Pod body and scoop on the bracket prior to this 48 hour time period.
- The wall bracket WILL NOT remain on the wall with tape alone. DO NOT INSTALL THE BRACKET WITHOUT THE SILICONE ADHESIVE.
- Place wall bracket onto the wall only once. DO NOT try to remove and reposition the wall bracket after mounting the first time.

## ⚠️ CAUTION

Contact with uncured adhesive may cause eye or skin irritation. Avoid contact with eyes and skin. Do not handle contact lenses with product on hands. Wash hands thoroughly after handling. In case of eye contact, immediately flush eyes with water for 15 minutes. If irritation develops and persists, seek medical attention. KEEP THIS ADHESIVE OUT OF REACH OF CHILDREN AT ALL TIMES. While curing, silicone releases acetic acid. Avoid prolonged exposure and keep area well ventilated.

## Removal Instructions

To remove the wall bracket, use a household solvent (like De-Solv-it<sup>®</sup> or Goo Gone<sup>®</sup>) to saturate surface behind wall plate. Spray or pour solvent directly on silicone. Allow solvent to sit for at least 5 minutes. Use a razor blade to cut the top of the silicone adhesive away from wall at top of bracket. Pull bracket from wall while continuing to cut adhesive.

Remove any remaining adhesive from wall with additional solvent and a razor blade.

If you have any questions or need further assistance, please do not hesitate to contact the Boon Customer Service Department at 888.376.4763 or [info@booninc.com](mailto:info@booninc.com).

[www.booninc.com](http://www.booninc.com)