

Frog Pod & Bug Pod Replacement Adhesive Strips

Mounting Instructions

Thank you for purchasing a Boon Frog Pod or Bug Pod. Please use the enclosed replacement adhesive strips for re-mounting the wall bracket to your bath wall. This durable adhesive is designed to withstand moisture. This adhesive forms a semi-permanent bond on most tile, glass, and fiberglass surfaces and will hold up to 10 lbs. The adhesive can be removed without harming the wall surface. Adhesive can only be used once. Additional replacement adhesive strips can be purchased at www.booninc.com.

⚠️ WARNING

- The Frog Pod/Bug Pod is not a toy!
- NEVER leave child unattended when bathing.
- This product should ALWAYS be used ONLY under adult supervision.
- Never apply excessive force to or allow children to hang from the Frog Pod or Bug Pod.
- ALWAYS position the product on the lower portion of the bath wall.
- FOLLOW INSTRUCTIONS CAREFULLY! The adhesive strips will NOT stick to the bath wall if you do not follow each step of the instructions.
- The adhesive strips will not stick to silicone-based tile sealants. If you have tile with a silicone-based sealant, we recommend using the screw-mounting option.
- When using the adhesive strip mounting option, DO NOT load the Frog Pod or Bug Pod with more than 10 lbs. of toys and accessories.

⚠️ CAUTION

- Adult assembly required.
- Rubbing alcohol (not included) is required for adhesive-mounting.

Important notes for using adhesive strips:

- When using the adhesive strips, it is very important that you place the bracket onto the wall in its proper position ONLY ONCE. After the adhesive strips are placed on the wall, DO NOT try to remove and reposition it as this will prevent the adhesive strips from adhering to the wall.
- To attach bracket to the bathtub/shower wall, select an area where strips are touching the least amount of grout.
- It is important to maintain a wall surface temperature above 70°F from the time you first place the adhesive strips onto the wall and throughout the entire 24 hour period before attaching the base. If you are mounting the adhesive strips on an exterior wall during cold weather, it may be necessary to increase the room temperature during this time.
- When placing the bracket onto the cleaned wall surface, use thumb to press firmly over each of the adhesive strips. Rub while pressing to remove any air bubbles between adhesive strips and wall surface. If adhesive strips cross grout lines, be sure to firmly press adhesive into recessed areas.


Step 1 Remove used adhesive strips from back of bracket. Make sure to thoroughly clean surface and remove all residue.

Step 2 Use rubbing alcohol to thoroughly clean back surface of bracket. Let dry fully for **AT LEAST 10 minutes**.

Step 3 Remove adhesive strips from plastic backing. **DO NOT TOUCH ADHESIVE**. Carefully place strips on all four sides of the back of the bracket. Press firmly over each adhesive strip.

Step 4 Select a mounting location on the lower portion of the wall. Leave the following minimum distance between the bottom of the bracket and any edge or raised surface of a bathtub below it.

Bug Pod: 7 inches min.
Frog Pod: 10 inches min.

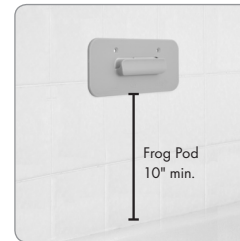

Step 5 THOROUGHLY clean wall surface with a household cleaner to remove any soap film or residue. Rinse THOROUGHLY and allow to dry completely. Be certain that you clean the entire area where the adhesive strips will be attached.

Step 6 Next, VIGOROUSLY wipe area with rubbing alcohol. Let dry fully for **AT LEAST 10 minutes**.

Step 7 Remove backing from all adhesive strips. **DO NOT TOUCH ADHESIVE**. Hold bracket by its EDGES ONLY.



Step 8 Make sure hook is in the upward position and level. Place bracket onto the cleaned area for mounting and be certain that ALL adhesive strips are pressed firmly against the wall. Press **FIRMLY** for 30 seconds.



Step 9 Allow bracket to remain in place for **AT LEAST 24 HOURS** before attaching the base. It is important to maintain a room temperature of 70°F or above throughout the entire 24 hour period. Also, avoid moisture and the use of cleaning chemicals near the wall bracket during the 24 hour period.

Step 10 To attach base to bracket, fit slot over bracket hook and snap down into place.



REMOVING THE ADHESIVE STRIP BRACKET:

To remove the adhesive strip bracket, use a flat object, such as a screwdriver or a butter knife (covered with a soft cloth to avoid scratching the wall surface), to pry up one of the adhesive strips. After loosening the first strip, rotate the bracket to release the remaining strips. Any adhesive residue remaining on the wall can be easily pulled off.

If you have any additional questions, please contact the Boon Customer Service Department.

888.376.4763 info@booninc.com www.booninc.com

